

	797 Gatehouse Lane Columbus, OH 43235	
DoubleCAD XT Installation Procedure		Customer Document
DOC-00044	B-1	1/1
Copyright 2018 Automatiq Measurement Systems LLC All Rights Reserved		CONFIDENTIAL

History:
8 Sep 15 – A1 Created.
15 May 18 - B1 Created.

1. Introduction:

1.1. Purpose: This procedure describes the process for installing DoubleCAD XT from IMSI Design.

1.2. Scope: This procedure is applicable to customers that require a method for viewing and editing drawings from Automatiq.

1.3. Key Terms

- Automatiq Automatiq Measurement Systems LLC
- IMSI Design IMSI/Design, LLC

2. Install and Run DoubleCAD XT: The following are instructions for installing DoubleCAD XT and opening Automatiq files.

2.1. Download DoubleCAD XT Installation Files: IMSI Design offers a free download for DoubleCAD XT.

2.1.1. Request DoubleCAD XT Download: Navigate to the DoubleCAD website at www.doublecad.com or www.turbocad.com and then locate the DoubleCAD XT download page. IMSI Design requires completing a form to request a DoubleCAD XT download.

2.1.2. Download DoubleCAD XT Installation File: After completing the download request form, IMSI Design will send an email with a link for a download of the DoubleCAD XT installer, a serial number, and an activation code.

2.2. Install DoubleCAD XT

2.2.1. Check Requirements For DoubleCAD XT: The DoubleCAD website includes a system requirements page that lists the hardware and software requirements for DoubleCAD XT. Ensure that the minimum requirements are met before proceeding further.

2.2.2. Run DoubleCAD XT Installer: Run the installer executable to install DoubleCAD XT.

2.3. Run DoubleCAD XT: Run DoubleCAD XT and open the Automatiq drawing with the dwg file extension. The drawing can now be edited and manipulated.